


## ACME Projector Retrofit Tips

The ACME retrofit is predominantly the same as the Morimoto retrofit in terms of steps, however, there are two main differences. Please refer to the **How To Seal** document for sealing the projectors.

There are four raised spots on the reflector bowl that need to be removed. This can be accomplished quickly with a dremel. Use compressed air to blow the dust off of the bowl when you're done to avoid scratching it.



The wires for the bi-xenon motor will pass through a hole that is in the adapter plate and through the reflector bowl edge. The wires come with the pins already installed for the 9005/9006 connector. You are welcome to try and feed the pins through the hole one at a time, I found it faster and less frustrating to clip the wires and then use butt connectors to splice them back together.

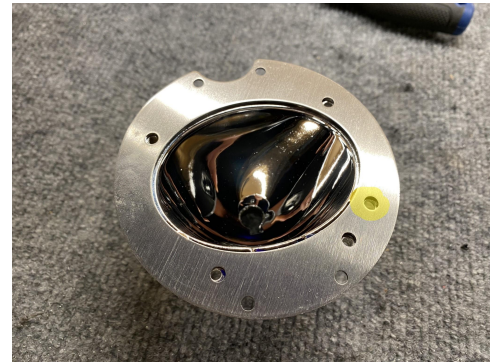

Here they are going through the adapter plate.



And on the backside. Once installed, you will want to put a dab of sealant over this hole and around the wires to seal it.

